MAINTENANCE

Before your journey, ensure your OPW CAGE is properly mounted.


The lifespan of the OPW CAGE will be influenced by the usage patterns and the humidity levels in the climate, it is recommended to clean and re-lubricate your OPW CAGE after each ride.

When traveling with your bike, it's advisable to remove the entire rear derailleur. This is due to the complexity of disassembling both the OPW CAGE and the rear derailleur, ensuring the protection of your OPW CAGE during transit.



HOW TO LUBRICANT YOUR PULLEYS

Apply a small amount of TRiPEAK lubricant against the edge of the bearing seal, to allow the lubricant to penetrate into the bearings for effective lubrication.

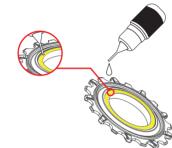


MAINTENANCE ADVICE

It is recommended to lubricate the pulleys while lubricating the chain or after washing the bike. Perform regular maintenance every six months.



DESCRIPTION

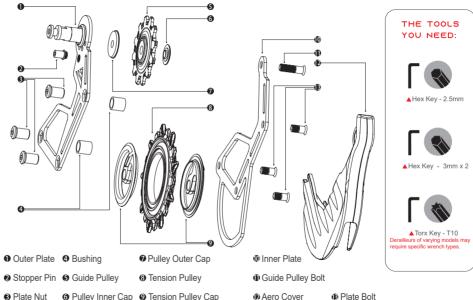

JETSTREAMPRO

AERO WING OPW CAGE

INSTALLATION MANUAL

FOR SHIMANO

DURA ACE 92XX/91XX 105 TIXX/TOXX ULTEGRA 81XX/80XX







To ensure a better riding experience, it is recommended to have the assembly of the TRIPEAK OPW CAGE performed by a professional or bicycle shop.













THE TOOLS

YOU NEED:

▲Hex Key - 2.5mm

▲Hex Key - 3mm x 2

▲Torx Key - T10

STEP



Remove the original derailleur cage and keep the original tension spring, axle fixing screw, and spring



For Di2 types of the derailleur, needs to be shifted to the highest position first to free up rotation space for removing and installing the derailleur cage.

STEP 2



Remove stopper pin with 2.5mm hex key from TRIPEAK OPW cage.

STEP 3





Hook tension spring into the spring's fixing hole of OPW cage, then set the spring seal in.

TRIPEAK OPW cage reserve 3 types of spring force fixing holes, please fix them according to your derailleur model.

STEP 4





The spring stopper and seal should fit the tip into the mounting holes, then insent OPW cage's axle to derailleur body.

Tghten fixing screw into derailleur with torx key. (max.1Nm).



Rotate the outer plate counterclockwise until the fixing hole of the stopper pin is visible



At this step, the outer plate may rebound, please handle it with care to prevent injury.

STEP 6



tighten the stopper pin using a 2.5mm hex key, then gently release the cage to reset, completing the installation





Some derailleurs may experience interference between the OPW and the derailleur body after installation. It is recommended to tighten the H bolt before installation to widen the derailleur body and prevent contact.

STEP 2



From the front end, gently push the Aero Cover into the OPW cage, insert the nut & bolt, then tighten them(max.4Nm) to complete the installation of the Aero Cover

AERO COVER INSTALLATION

STEP



Using two 3mm hex keys to remove the plate nut, plate bolt, and bushing from front-end fixing hole.

Insert the bushing into the fixed hole of the Aero Cover.





Ensure that the clasps on the front and rear of the AERO COVER are flat against the front and rear

