




BB386 Road

BOTTOM BRACKET

INSTALLATION

BB386 Road TO Campagnolo Ultra Torque TWIST-FIT BB System

TRIPEAK Product NO. EMA-38625-CPBB

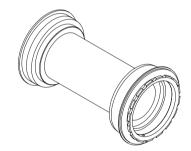









Step 1

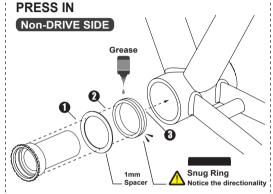

Step 2

TWIST-LOCK


DRIVE SIDE Cup set lock to 30Nm

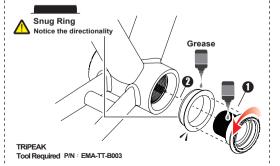


M NOTICE

- . To install TRIPEAK Bottom Bracket, we strongly recommend that you have a trained bicycle mechanic at your local bike shop.
- · Do not alter this product in any way as it can cause unseen damage. Any modifications to this product will void the warranty.
- Make sure with the crankset are firmly attached to the bottom bracket. Improperly attached cranks can become detached from the BB set.
- · When cleaning the bottom bracket set, only use mild soap and water. Never spray with high-pressure water. It will cause BB cup internal water ingress and influencing the bearing rolling lifetime.
- · If you have any questions or concerns about this product Please feel free to contact us. E-mail:info@tripeakbearing.com

Snua-Rina PA+GF Mold & CNC Finished



Installed-Width



www.tripeakbearing.com