

### PF30A Road

# **BOTTOM BRACKET**

INSTALLATION

**PF30A Road TO PRAXIS M30 TWIST-FIT BB System** 


TRIPEAK Product NO. EMA-PF30A28-PW★TF12








## Step 1

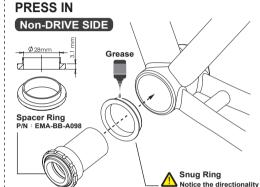

#### **Bearing Options**

★ SB (Steel Bearing) / ★ CB (Ceramic Bearing) Bearing Size: 30 X 42 X 7mm (6806-2RS)


Replacement Bearing set TRIPEAK item NO. SB: EMA-HP6806-2RS / CB: EMA-JC6806-2RS

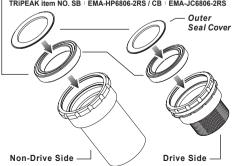

#### Step 2


**TWIST-LOCK** 

DRIVE SIDE Cup set lock to 30Nm

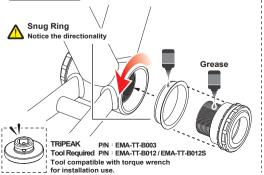


#### **NOTICE**

- To install TRIPEAK Bottom Bracket, we strongly recommend that you have a trained bicycle mechanic at your local bike shop.
- · Do not alter this product in any way as it can cause unseen damage. Any modifications to this product will void the warranty.
- Make sure with the crankset are firmly attached to the bottom bracket. Improperly attached cranks can become detached from the BB set.
- · When cleaning the bottom bracket set, only use mild soap and water. Never spray with high-pressure water. It will cause BB cup internal water ingress and influencing the bearing rolling lifetime.
- If you have any questions or concerns about this product Please feel free to contact us. E-mail:info@tripeakbearing.com



#### **Installed-Width**

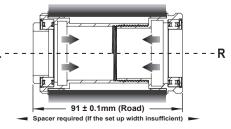

www.tripeakbearing.com